



Installation instruction for Navi holder Honda Crossrunner VFR 800 X

- Dismantle the windshield - loosen the screws and push the windshield downwards with the dowels.
- From the driver's point of view, place the bracket with the clamping bracket on the cockpit superstructure so that the M4 screw of the clamping bracket just **not** touches the edge of the cockpit superstructure.
- Now mark **exactly the middle** of the hole for the fixing plug on the cockpit superstructure and drill a hole with **max. 8mm diameter** - maybe pre-drill with a smaller drill - then insert dowel.
- Mounting height of the Navi by moving the swiveling adapter plate (can also be rotated)

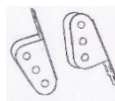

test and adjust accordingly.

- Now make sure the surface (for the adhesive stripe) on the fairing is fat-free - use alcohol or similar.
- Remove the protective film from the adhesive strip on the underside of the holder and press it **exactly in the center** of the casing.
- Fix the holder to the dowel with the M4 x 20 screw, then tighten the screw of the clamp until the cladding deforms only minimally (~ 1 mm).
- Finally, adjust the angle for the attached navigation device and tighten the screws of the friction hinges as required (adjustable or fixed).

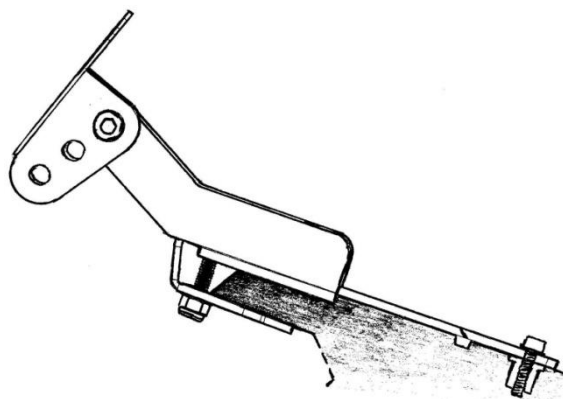

- If necessary, lay the connection cable before reassembling the windshield

If the vehicle is sold without the navi holder, the bore in the cockpit superstructure can be closed again with the sealing plug included in the delivery.

This manual is based on our current knowledge. Legal claim for their correctness does not exist.
Reserve technical changes.